



# Selective manganese deposition for CU\_low k nano device interconnect

## Citation

Nguyen, Son V., T. Vo, D. Priyadarshini, T. Haigh Jr., T. Nogami, S. Cohen, P. Flaitz, Y. Lin, H. Shobha, A. Grill, D. Canaperi, Roy Gordon. 2015. Selective manganese deposition for CU\_low k nano device interconnect. AVS Topical Conference on Atomic Layer Deposition (ALD 2015), Portland, Oregon, June 28 - July 1, 2015.

## Permanent link

<http://nrs.harvard.edu/urn-3:HUL.InstRepos:32188709>

## Terms of Use

This article was downloaded from Harvard University's DASH repository, and is made available under the terms and conditions applicable to Open Access Policy Articles, as set forth at <http://nrs.harvard.edu/urn-3:HUL.InstRepos:dash.current.terms-of-use#OAP>

## Share Your Story

The Harvard community has made this article openly available.  
Please share how this access benefits you. [Submit a story](#).

[Accessibility](#)

# Selective manganese deposition for Cu\_low k nano device interconnect

Son V. Nguyen, T. Vo\*, D. Priyadarshini, T. Haigh Jr., T. Nogami, S. Cohen<sup>1</sup>, P. Flaitz<sup>2</sup>, Y. Lin<sup>2,3</sup>, H. Shobha, A. Grill<sup>1</sup>, D. Canaperi and Roy Gordon<sup>3</sup>,

IBM at Albany Nanotech and SUNY Polytechnique University\*, 257 Fuller Rd, Albany, NY 12203 USA;

<sup>1</sup>IBM T.J. Watson Research Center, 1101 Kitchawan Road, Route 134, Yorktown Heights, NY 10598 USA;

<sup>2</sup>IBM Semiconductor Research and Development Center, 2070 Route 52, Hopewell Junction, NY 12533 USA,

<sup>3</sup> Department of Chemistry and Chemical Biology, Harvard University, Cambridge, Massachusetts, USA 02138

email: [sonn@us.ibm.com](mailto:sonn@us.ibm.com), phone: (518) 292-7237

Plasma Enhanced Chemical Vapor Deposited (PECVD) low-k SiCNH and SiN are the predominant dielectric Cu diffusion caps used by the industry, due to the strong cap/Cu debond energies (1), to prevent Cu exposure to harsh subsequent fabrication process, and to maintain the device interconnect yield and reliability. In recent years, the insertion of a metal cap such as selective Co (2) increases significantly the Cu/metal surface debond energy and subsequently improves the EM performance of Cu/low k interconnects (or BEOL). This paper presents the selective deposition of manganese metal cap for Cu/low k interconnect as a part of IBM-Harvard joint evaluation development with potential use in sub-10 nm BEOL. The selective CVD Mn deposition process and Co metal cap discussed in this paper. The Mn CVD process was developed at Harvard University's Roy Gordon Lab using an oxygen-free Mn-amidinate precursor. Figure 1 illustrates the set up used for the selective Mn CVD process used in this evaluation. A surface treatment (SAM) precursor is used (3) to enhance the Mn selectivity over Cu/SiO<sub>2</sub>-pSiCOH dielectric. No plasma treatment is required prior to deposition of Mn thus eliminating any plasma damage on the pSiCOH ULK as compared to selective Co process (2). Excellent Mn selectivity Mn (>200:1 Cu/SiCOH) was observed by this novel Mn CVD process and tested with 32 nm BEOL structures, Figure 2. EDX/EELS elemental analysis confirms the excellent Mn selective deposition on Cu, Figure 3. Detailed Cu resistance measurements showed that if the Mn cap is less than 2-2.5 nm thick, the resistance change of Cu is minimal (<2%). Overall, the process shows promising potential to be used together with Mn self-forming barrier liner for sub-10 nm Cu/pSiCOH interconnect.

**Acknowledgments:** This work was performed by Alliance Teams /SUNY Research Foundation at various IBM Research and Development Facilities and at Albany Nanotech.

## References

- [1] J. R. Lloyd *et al.*, *IEEE Transaction on Devices and Materials Reliability*, vol. 5, no.1, pp.113-118, March 2005.
- [2] S. Nguyen *et al.*, *Atomic Layer Deposition Conference Proceeding*, 2013, pp 124-125, San Diego, CA USA.
- [3] A. Au, Y. Lin, H. Kim, E. Beh, Y. Liu and R. Gordon, *J. Electrochem. Soc.*, V157 (6), pp. D341-345, 2010.

Figure 1- The deposition process chemistry for selective manganese deposition.

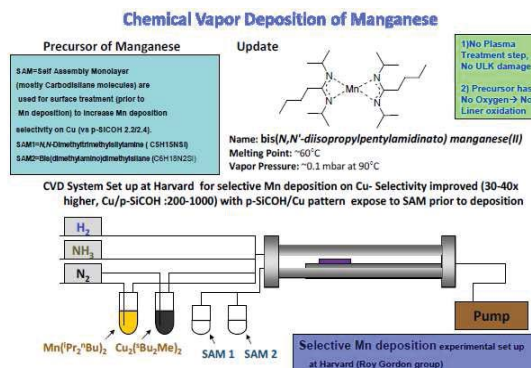


Figure 2- STEM showed excellent selectivity of Mn over Cu/ILD dielectrics.


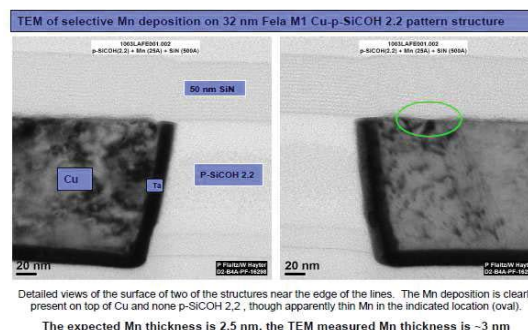


Fig.3- STEM/EDX/EELS compositional analysis confirm excellent Mn selectivity on Cu/pSiCOH k2.2 .

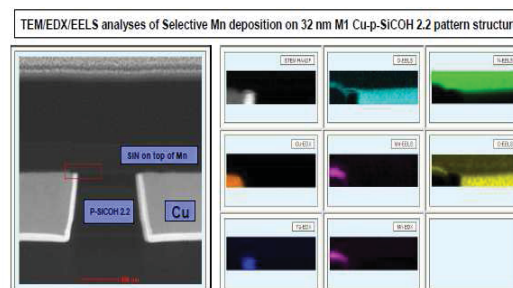

Similar EDX/EELS maps were obtained at the edge of a line, over the low-k surface (red rectangle in STEM image at left). Maps at right show no indication of Mn over the ULK or over the Ta liner, only over the Cu surface. EXCELLENT CVD Mn selectivity on Cu confirmed.